

Wireless push button RC-28

The RC-28 is designed to be used as a wireless door bell button. It works with the UC-260 receiver as well as the UC-216, UC-222 and the UC-280 receivers.

Specification

Power	6 V battery (L1016 type)
Battery life time	typically 1 year
Frequency	433.92 MHz
Operating environment	Outdoor sheltered (use the protection roof)
Operating temperature	from -20 °C to +50 °C
Operating humidity	from 25 % to 75 %
Storage temperature	from -20 °C to +70 °C
Can be operated according to ERC REC 70-03	

CE Hereby, Jablotron Ltd., declares that this RC-28 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Original of the conformity assessment can be found at the web page www.jablotron.cz, section Technical support.

Installation

Note: Do not install the RC-28 on a metal surface. This could lead to significant reduction of the working distance

- Open the name label cover (see picture).
- Unscrew the screw under the cover
- Remove the rear part of the button by pressing in the released screw.
- Attach the rear part in the desired location together with the protective roof.
- Install the button to the rear part.
- Write the desired name on the label and reattach its cover
- Enroll the button to the receiver(s) – see the receiver's installation manual for details
- Be careful not to use too much force while handling the transparent cover. If the cover has to be removed it is advisable to use a tool to grab the jutting out part of the cover and pull it up.



Battery replacement

The battery life time for the wireless button is typically one year. After this period you should replace the battery with a new one. When a new battery is installed, press the button. The red indicator should flash brightly if the battery is correctly connected.

The RC-28 requires no other specific maintenance. Do not use any organic solvent for cleaning.

Note: Dispose of batteries safely depending on the type of the batteries and local regulation. Although this product does not contain any harmful materials we suggest you to return the product to the dealer or directly to the producer after usage.

 Pod Skalkou 33
466 01 Jablonec nad Nisou
Czech Republic
Tel.: +420 483 559 999
fax: +420 483 559 993
Internet: www.jablotron.cz

Wireless push button RC-28

The RC-28 is designed to be used as a wireless door bell button. It works with the UC-260 receiver as well as the UC-216, UC-222 and the UC-280 receivers.

Specification

Power	6 V battery (L1016 type)
Battery life time	typically 1 year
Frequency	433.92 MHz
Operating environment	Outdoor sheltered (use the protection roof)
Operating temperature	from -20 °C to +50 °C
Operating humidity	from 25 % to 75 %
Storage temperature	from -20 °C to +70 °C
Can be operated according to ERC REC 70-03	

CE Hereby, Jablotron Ltd., declares that this RC-28 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. Original of the conformity assessment can be found at the web page www.jablotron.cz, section Technical support.

Installation

Note: Do not install the RC-28 on a metal surface. This could lead to significant reduction of the working distance

- Open the name label cover (see picture).
- Unscrew the screw under the cover
- Remove the rear part of the button by pressing in the released screw.
- Attach the rear part in the desired location together with the protective roof.
- Install the button to the rear part.
- Write the desired name on the label and reattach its cover
- Enroll the button to the receiver(s) – see the receiver's installation manual for details
- Be careful not to use too much force while handling the transparent cover. If the cover has to be removed it is advisable to use a tool to grab the jutting out part of the cover and pull it up.



Battery replacement

The battery life time for the wireless button is typically one year. After this period you should replace the battery with a new one. When a new battery is installed, press the button. The red indicator should flash brightly if the battery is correctly connected.

The RC-28 requires no other specific maintenance. Do not use any organic solvent for cleaning.

Note: Dispose of batteries safely depending on the type of the batteries and local regulation. Although this product does not contain any harmful materials we suggest you to return the product to the dealer or directly to the producer after usage.

 Pod Skalkou 33
466 01 Jablonec nad Nisou
Czech Republic
Tel.: +420 483 559 999
fax: +420 483 559 993
Internet: www.jablotron.cz