


### Temperatures corresponding to „A“

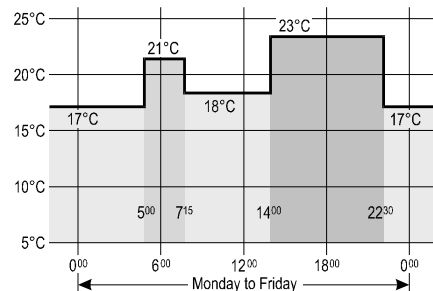

### Use this table for your own data

| Program number       | Start | °C |
|----------------------|-------|----|
| 1. Monday to Friday  |       |    |
| 2. Monday to Friday  |       |    |
| 3. Monday to Friday  |       |    |
| 4. Monday to Friday  |       |    |
| 1. Saturday & Sunday |       |    |
| 2. Saturday & Sunday |       |    |

### Temperature span adjustment

The factory set temperature span is 1°C. For example, if the temperature set point is 20°C, the heating system will turn on at 19.5°C and turn off at 20.5°C.

The span is programmable. You can choose between 0.5, 1.0, 1.5 and 2.0°C.

To review or to change the temperature span:

1. Press PROG key while the RETURN key is pressed.
2. Release both keys.
3. Press the ▲ or ▼ buttons to select the new temperature span.
4. Press the RETURN key or wait 10 seconds for the automatic return.

*Note: Choosing a small temperature span such as 0.5°C will be more comfortable (less temperature variation in the apartment) but, the heating system will turn on and off more often.*

### New thermostat learning into the receiver unit

The receiver unit, which is included in the set, has been factory adjusted for the thermostat code. If you change the thermostat for a new one, the receiver unit must be taught its code in the following way:

Remove the batteries from the thermostat

Open the upper cover from the receiver unit

Press the button inside the receiver several times until the 4<sup>th</sup> LED flashes

Place the batteries into the thermostat and all LEDs in the receiver will flash once

Reinstall the receiver cover

*Note: Each receiver can work with only one thermostat. If the receiver unit was used with any other device before, reset its memory before learning a thermostat. To reset the memory make the 4th LED flashing and then press and hold the receiver button unit all LEDs flash rapidly for a moment.*

### Specifications

|                              |       |  |
|------------------------------|-------|--|
| <b>Thermostat unit:</b>      | Power | 2x AA battery (low battery indication) |
| Temperature Control Range    |       | from +5°C to +27°C                     |
| Switching span               |       | selectable from +0.5°C to +2°C         |
| Temperature programs         |       | 4 in weekday, 2 in weekend             |
| Working frequency            |       | 433.92 MHz                             |
| Working distance             |       | up to 100 m (open area)                |
| Can be operated according to |       | ERC REC 70-03                          |
| Comply with                  |       | EN ETSI 300220, ETS 300683             |

|                       |          |   |
|-----------------------|----------|---|
| <b>Receiver unit:</b> | Voltage: | 230 V AC  |
| Power consumption:    |          | max. 1 W  |
| Operating frequency:  |          | 433.92 MHz  |
| Coding:               |          | digital, each thermostat has a unique floating code |
| Output relay:         |          | over switching dry contact                          |
|                       |          | Fused 6 A at 250 V                                  |



Pod Skalkou 33  
466 01 Jablonec nad Nisou  
Czech Republic  
Tel.: +420 483 559 999  
fax: +420 483 559 993  
Internet: www.jablotron.cz



Hereby, Jablotron Ltd., declares that this TP-60 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Original of the conformity assessment can be found at the web page [www.jablotron.cz](http://www.jablotron.cz), section Technical support.

Wireless thermostat TP-60


- 4 / 4 -

MDU51604

## Wireless thermostat TP-60

The TP-60 wireless thermostat can replace most common residential thermostats and is designed to be used with electric, gas or oil heating. Many useful functions and operating modes have been incorporated to provide a variety of solutions for all customer needs. In addition to all of the useful functions, this state of the art programmable thermostat has the following advantages:

- simple installation: no wires required, long working distance
- 7 day timer to set the ECONO mode during a prolonged absence of the user.
- protection against freezing.
- Air filter (cleaning) supervision.
- programmable regulation sensibility (SPAN)

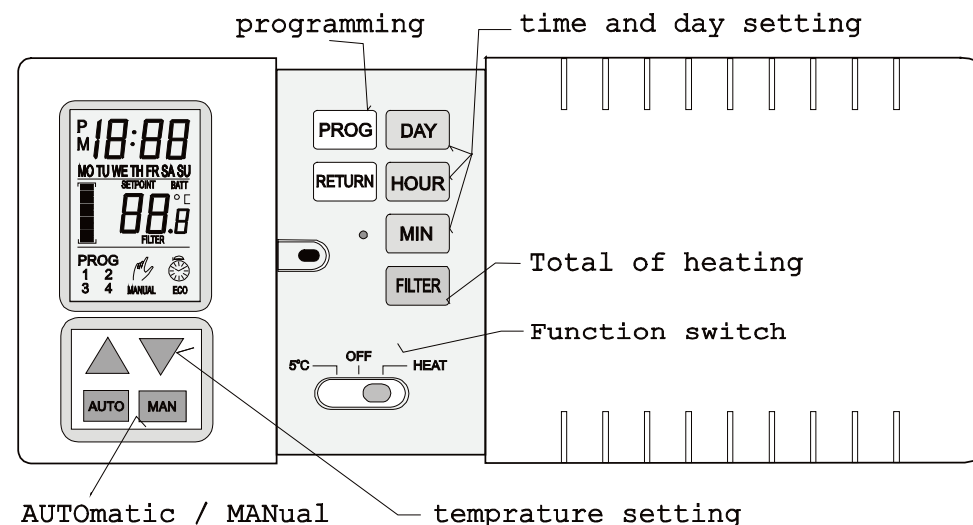

*Note: Dispose of batteries safely depending on the type of the batteries and local regulation. Although this product does not contain any harmful materials we suggest you to return the product to the dealer or directly to the producer after usage.*

### Installation

**Choosing a location** for the thermostat unit - choose a mounting location about 1.5 meter above the floor in an area with good air circulation and away from:

1. Drafts and "dead air" spots.
2. Radiant heat from the sun or appliances.
3. Concealed pipes and chimneys.

#### Mounting the thermostat unit onto the wall:

1. Remove completely the slide door of the thermostat.
2. Mark the holes position
3. Drill two holes and insert the plastic anchors carefully into the holes.
4. Fasten the thermostat to the wall with the two (2) screws - included
5. Install two "AA" size alkaline batteries into the battery compartment.

Wireless thermostat TP-60


- 4 / 1 -

MDU51604


Mounting the receiver unit

Locate the receiver unit in a suitable place near the heater. Wiring of the unit to the heater should be done by a professional electrician:

- 1. Release the upper cover by pressing the plastic log on the side of housing.
- 2. Release the internal cover (1 screw).
- 3. Mount the unit onto desired location (2 screws).
- 4. Connect power 230VAC / 50Hz to terminals L and N.
- 5. Two PE terminals are available for Protective Earth connection.
- 6. Terminals C (common), N.O. (normally open) and N.C. (normally closed) are outputs of the built-in over-switching relay contact. This contact is protected by a 6.3A fuse. The contacts are galvanically separated. See example of wiring in the picture.
- 7. When wiring is finished, install both covers back on to the unit.

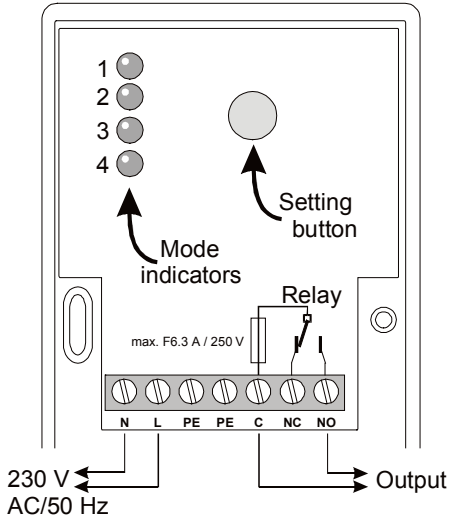

**Note:** Each thermostat has its unique code. The receiver unit has been factory adjusted for this code. There is no need to adjust anything on the receiver. A built in indicator on the receiver unit indicates the output relay condition.

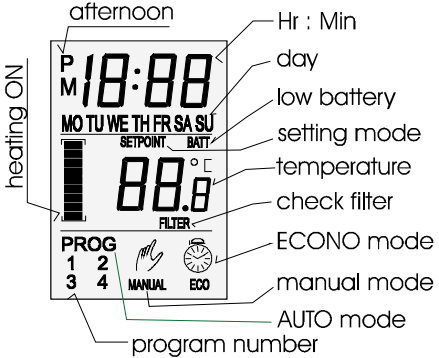

- Pressing ▲ or ▼ button displays the temperature set point of the running program for five seconds.
- MAN** : The MANual mode allows the user to bypass the programming
  - Press on the MAN button and a hand symbol will be displayed.
  - A first pressing on ▲ or ▼ displays the MAN temperature set point.
  - Each subsequent pressing will change the MAN temperature set point by 0.5°C
- TIMER ECONO** : The TIMER ECONO mode holds the ECONO temperature set point until the user's predetermined time and day is reached. Then, the thermostat turns to AUTOMATIC mode. This operating mode allows the user to not reprogram his thermostat for a prolonged absence (up to one week) and allows for maximum savings.

- To get into this operating mode :
- press and hold MAN button for three (3) seconds.
  - The clock symbol, the return time and the ECONO temperature set point will be displayed.
  - Press DAY, HOUR and MIN keys to specify the return time.
  - Press ▲ or ▼ button to specify the ECONO temperature set point.

Function switch

This switch selects the functions **HEAT**, **OFF** and **5°C**.

**HEAT** : Select this position to control the heating system. In AUTO mode the thermostat refers to the user programmed data to control the temperature.

**OFF** : This function switches off the heating system.

**5°C** : This function holds the temperature set point at 5°C (heating) in order to prevent freezing.

**FILTER** button : The thermostat keeps a record of the number of hours your filter has been used. It will display the total number of hours the system has been ON. After 250 hours of system operation, the FILTER indicator will begin flashing in order to remind you to change or clean the filter and to reset the filter counter back to zero. The filter counter will count up to a maximum of 999 hours and stays there until you reset it again. **To reset the counter**, press and hold the FILTER key until the display shows 000.

Programming

The thermostat has an automatic return function. When a function, such as the program recording filter review etc., has not been completed by pressing the RETURN key, the thermostat will automatically exit those functions after five (5) seconds.

Time and day adjustment

Any time in the normal mode setting, press DAY HOUR and MIN keys to set the time and day.

Pre-recorded programs

This thermostat has four (4) pre-programmed heating programs for weekdays and two (2) for weekends. You can modify them at your convenience.

- Programming Method :
- Place the function switch to the HEAT position
  - Press the PROG key. The display shows the program's starting time and temperature setpoint. The Monday to Friday indicator will turn on indicating that this program is associated to the days of the week. The program number 1 will flash indicating the selected program. Pressing again the PROG key will allow you to scroll through the weekday programs 1 to 4 and weekend programs 1 and 2.
  - Select the program to be modified using the PROG key.
  - Press the HOUR and MIN keys to modify the program's starting time and the ▲ or ▼ buttons to modify the program's temperature set point.
  - Press the RETURN key or wait 10 seconds for the automatic return.

Programming examples

Example „A“ use of all programs

| Program number      | Start    | °C |
|---------------------|----------|----|
| 1. Monday to Friday | 5.00     | 21 |
| 2. Monday to Friday | 7.15     | 18 |
| 3. Monday to Friday | PM 2.00  | 23 |
| 4. Monday to Friday | PM 10.30 | 17 |
| 1. Saturd. & Sunday | 7.00     | 22 |
| 2. Saturd. & Sunday | PM 11.00 | 17 |

Example „B“ use of only some programs

| Program number      | Start   | °C         |
|---------------------|---------|------------|
| 1. Monday to Friday | 7.00    | 21.5       |
| 2. Monday to Friday | PM 5.30 | 18         |
| 3. Monday to Friday | PM 5.30 | = previous |
| 4. Monday to Friday | PM 5.30 | = previous |
| 1. Saturd. & Sunday | 12.00   | 17         |
| 2. Saturd. & Sunday | 12:00   | = previous |